



1. Front Body (Front Body, installation on the outside of the door)

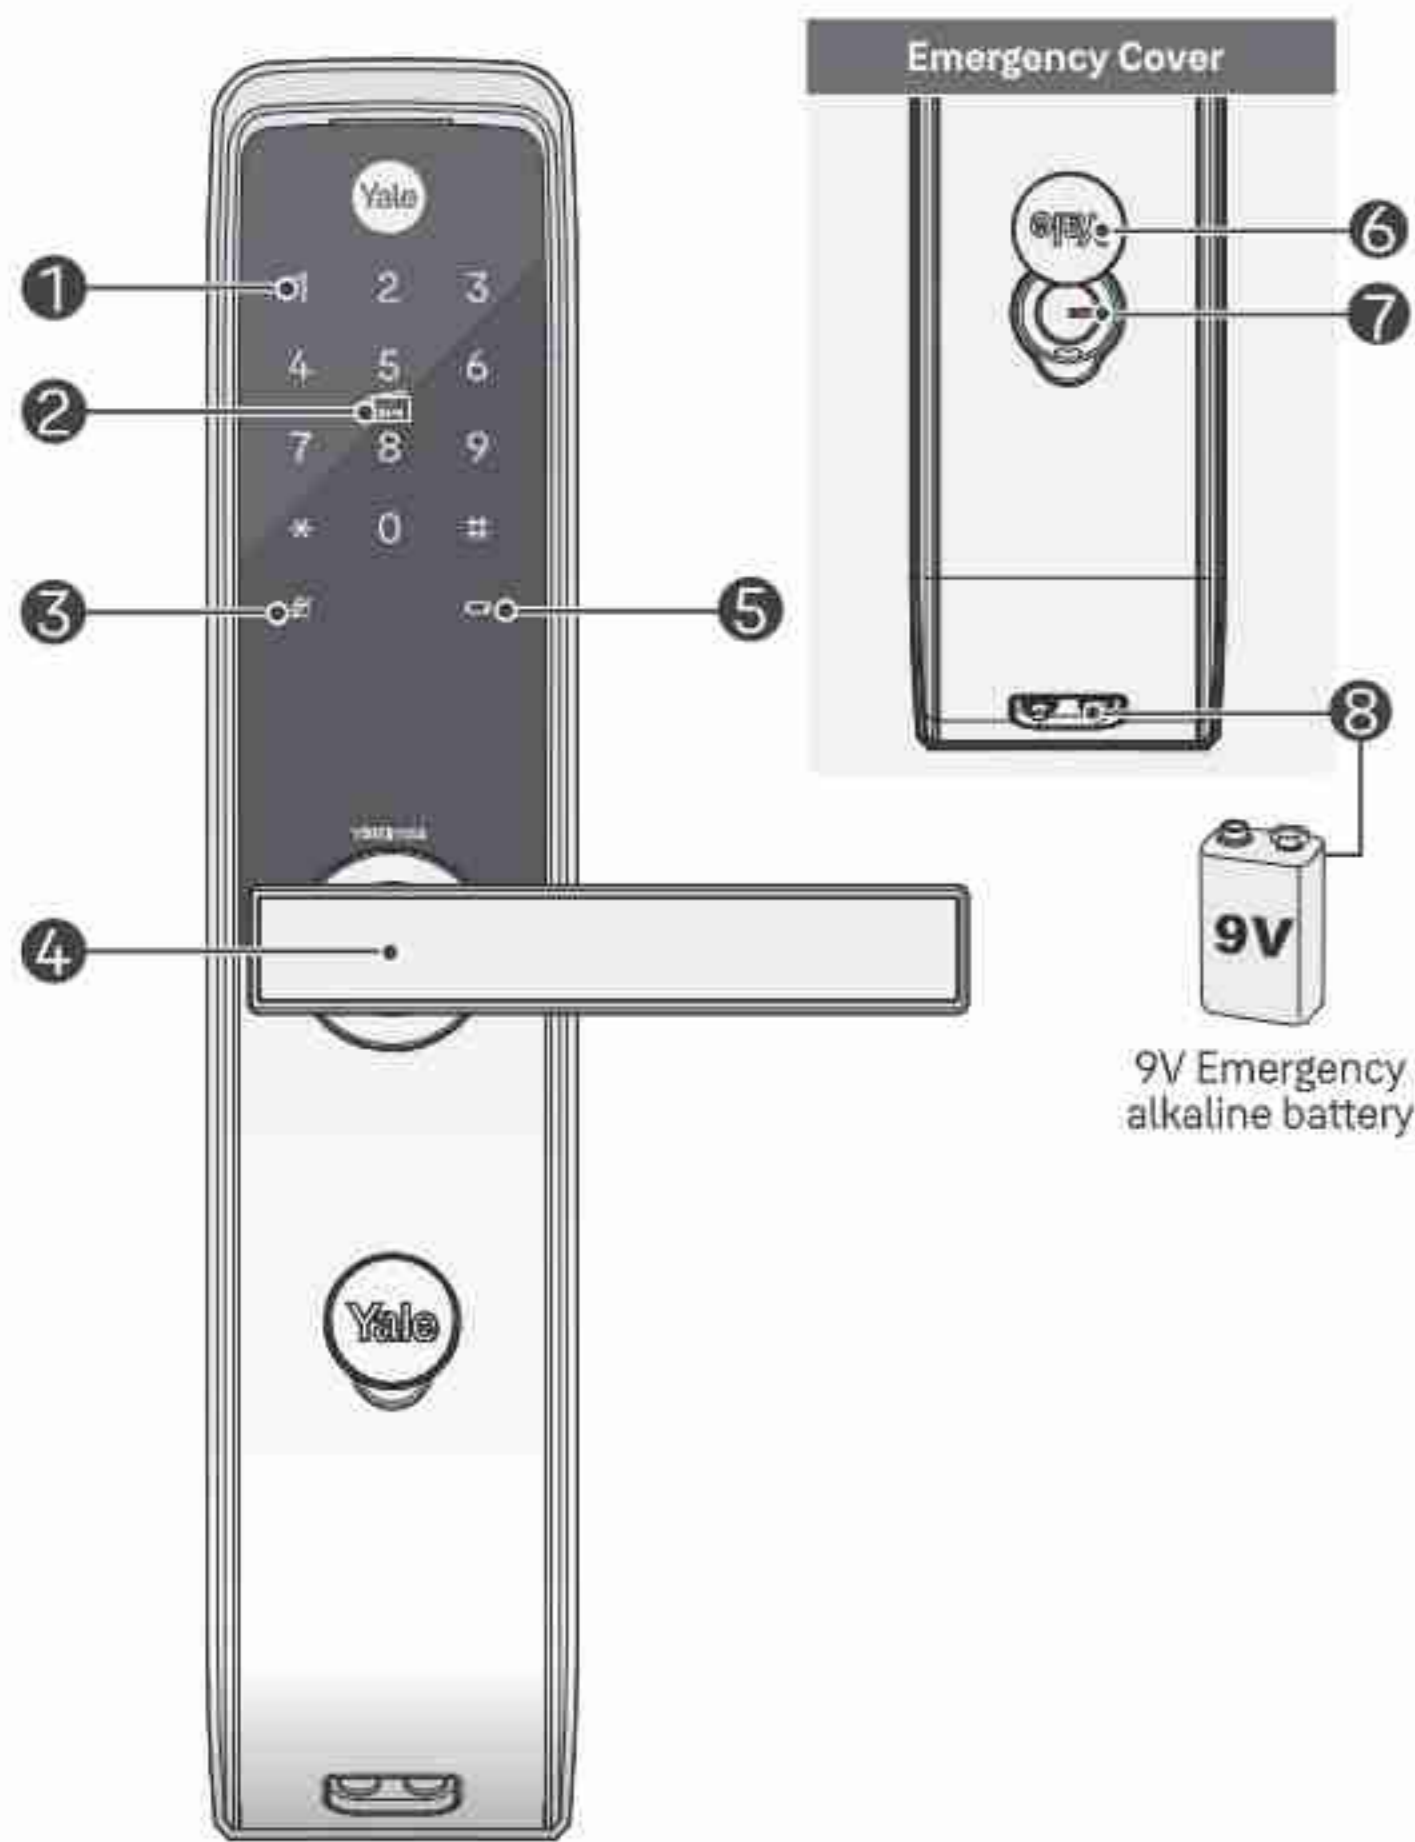

2. Basic Contents

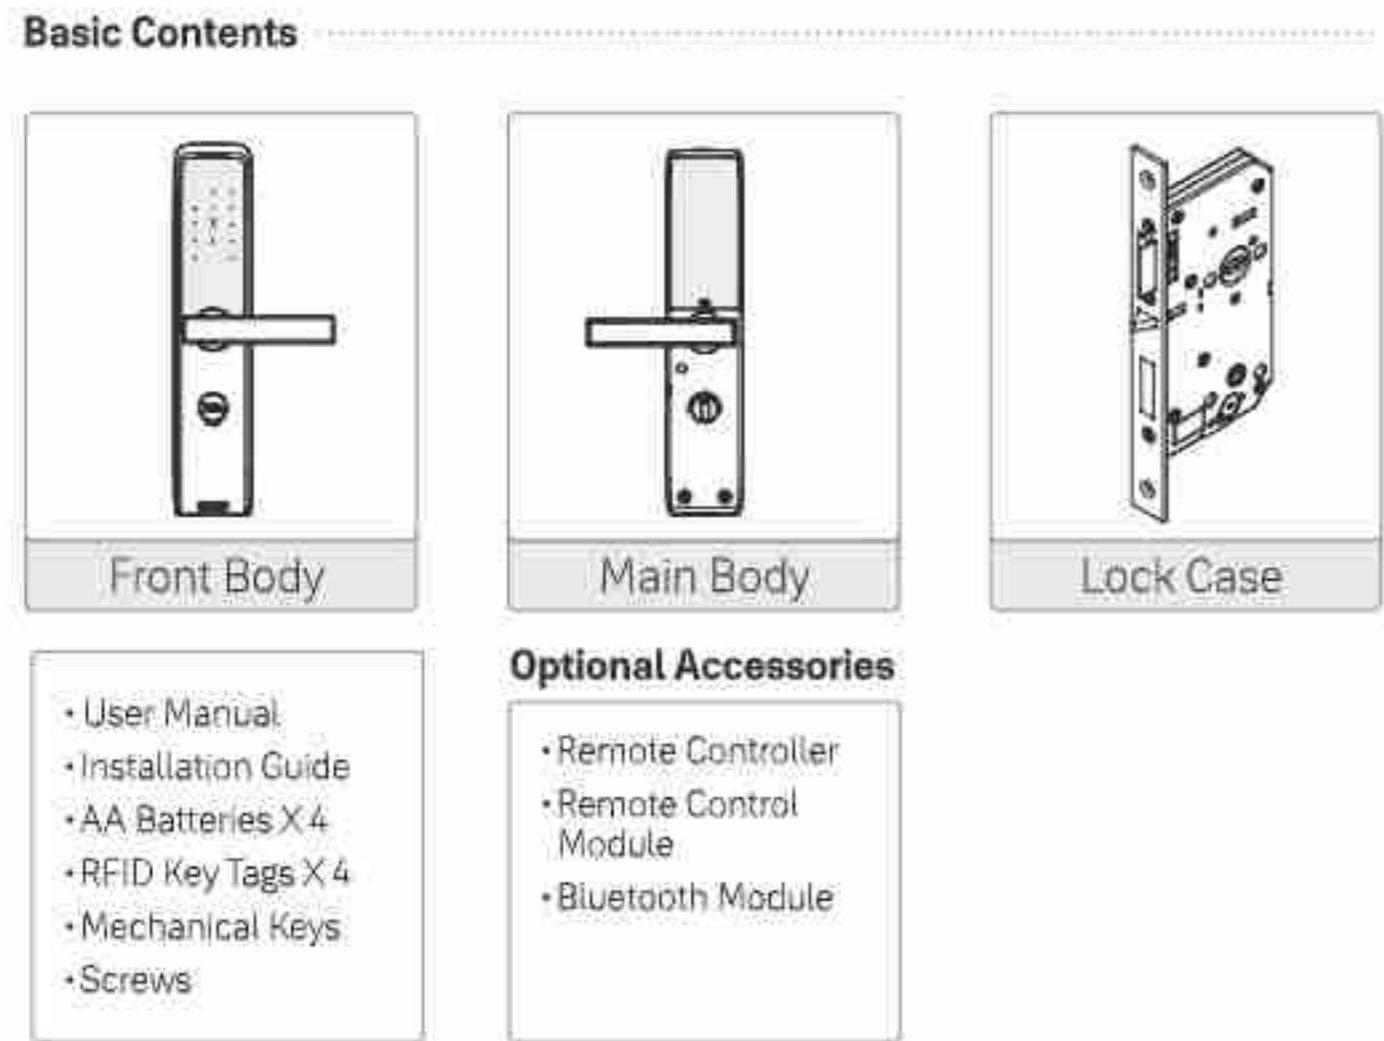


3. Specifications

Parts	Specifications	Remarks
Front Body	72(W) X 344(H) X 30(D) mm	Operating temperature -15~55°C (5~131°F)
Main Body	72(W) X 344(H) X 36(D) mm	
Lever	Zinc die-casting	
Card Keys	4 EA	Up to 100 keys
Works for	4EA 1.5V AA Alkaline batteries (Operating voltage: 4.5~6V)	Last up to 10 months (10 times used a day)
Lock Case	Steel and SUS304	
Option Remote Control	Wireless	Optional

* Battery life may vary depending on temperature, moisture levels, frequency of use and the quality of battery used.
 * Please make sure that all parts are included when purchasing the product.
 * Optional products may not be available depending on your country or local dealer.

4. Main Body (Main Body, installation on the inside of the door)

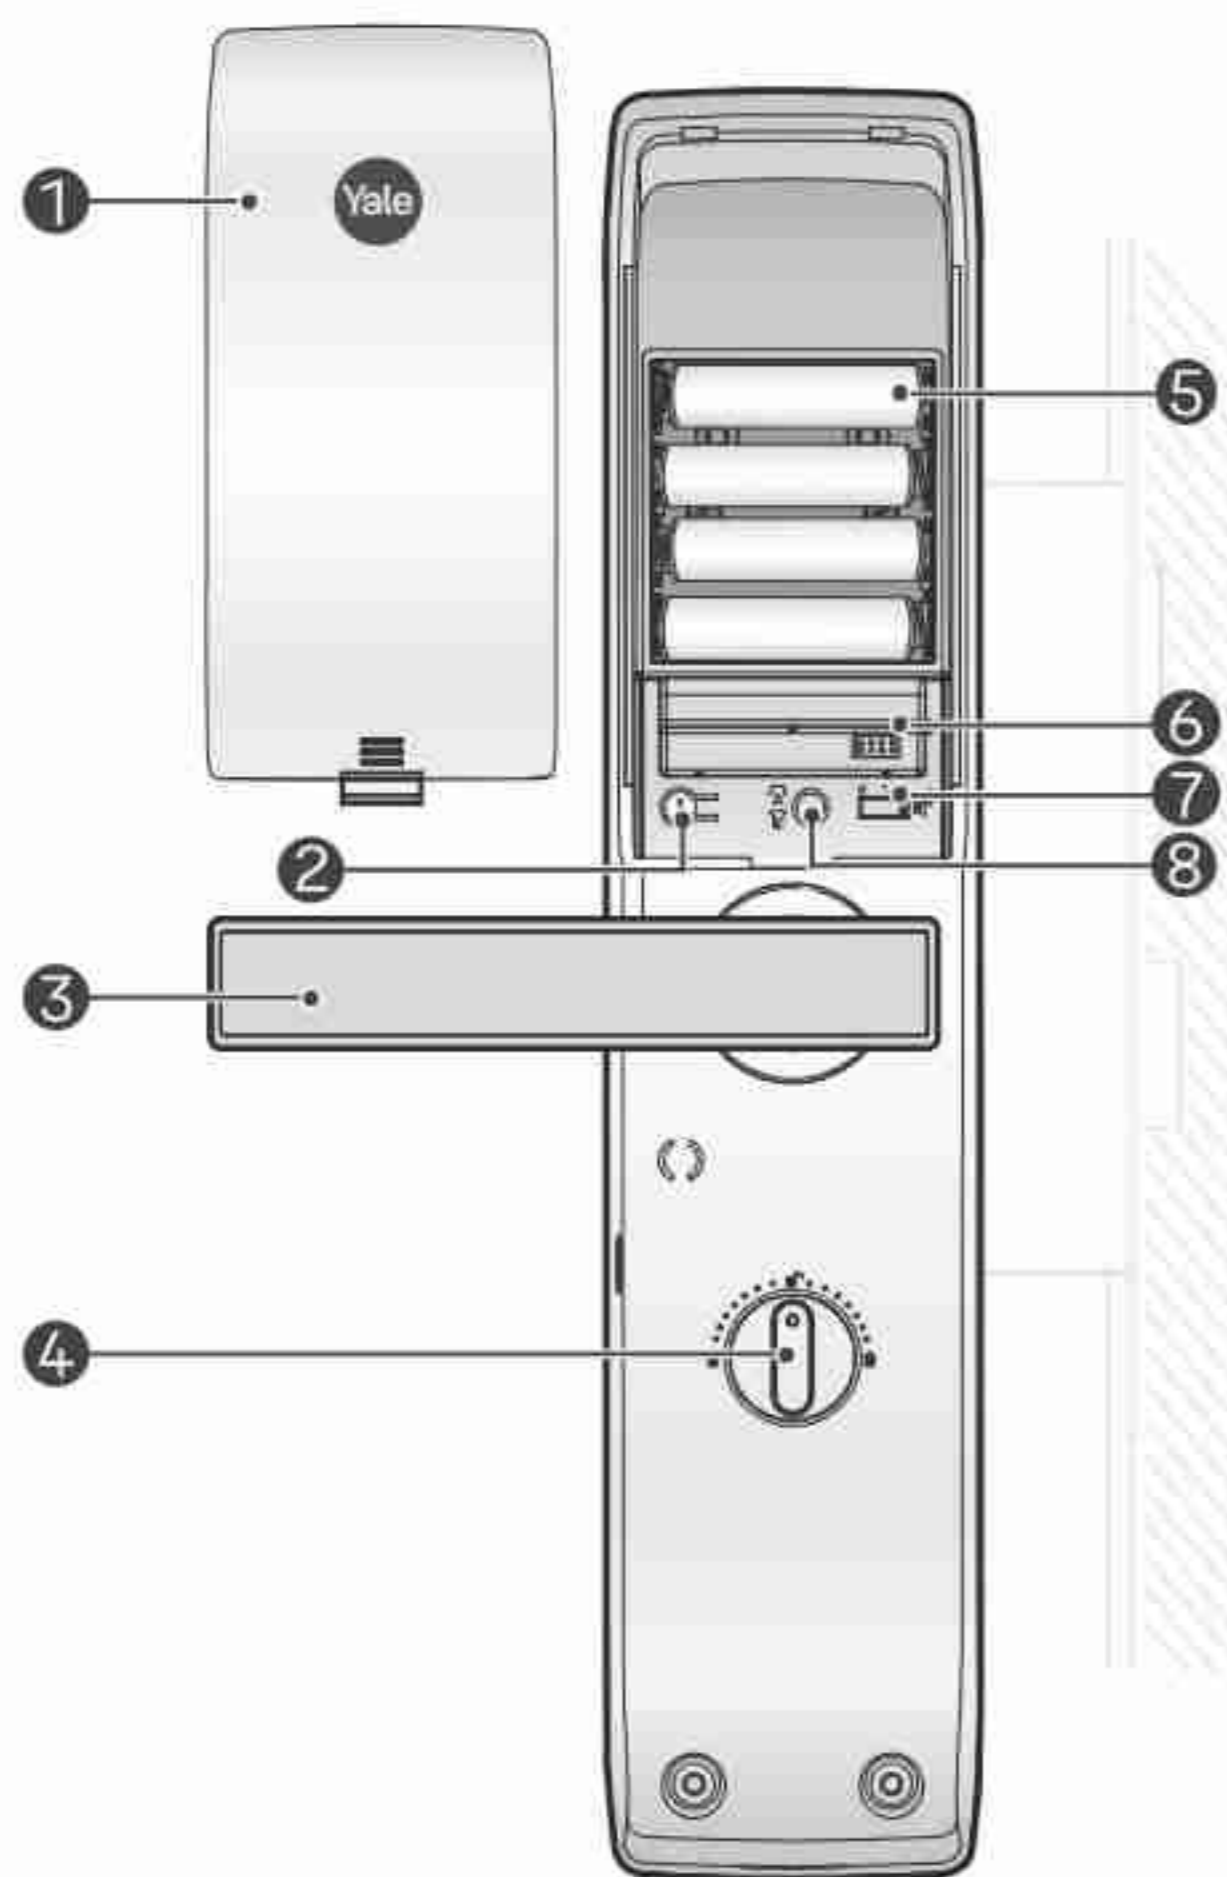

5. Front Body

- 1 Keypad(10-key)
- 2 RFID Key Tag reader
- 3 Dead Bolt Jam Lamp
- 4 Lever
- 5 Low Battery Indicator
- 6 Emergency Cover
- 7 Emergency Mechanical Key Slot
- 8 Emergency Power Supply Terminal

6. Main Body

- 1 Battery Cover
- 2 ① Registration button
- 3 Lever
- 4 Manual Thumb Turn
- 5 1.5V AA Alkaline Batteries (4PCS)
- 6 Module Accessory Slot (Optional)
- 7 Volume Control Switch
- 8 Auto/Manual Lock Button

7. Setting Menu

Master Mode: Only a designated person who knows 'Master PIN Code' has authority to set features.
Normal Mode: If no user is assigned with master code without a designated person, anyone who knows 'User PIN Code' has authority to set features.
Visitor Code: Users with Visitor Code can only open the door with no access to change settings.
Onetime Code: The onetime code is used only once for unlocking the door lock and automatically deleted after usage.
User Slot Number: It should be 2 digits(like '01', '02'...'99', '00') and available in advanced mode.

	Touch the Keypad of the Front Body with your palm to begin
	Press * button on the Keypad
	Press # button on the Keypad
	Press ① (Registration) button in every steps to start or complete the session
	Enter User RFID Key Tag (Up to 100 Users)
	Enter User Code (4 ~ 10 digits)
	Enter Master Code (4 ~ 10 digits)
	Enter Visitor Code (Only 4 digits)
	Enter Onetime Code (Only 4 digits)
	User Slot Number should be 2 digits (Like '01'...'99' and '00'; Location of '00th' user slot must be assigned '00' instead of '100'.)
	Rotation area to add more features

8. Product Features

- Yale Access App**
 Yale Access gives you the peace of mind of knowing who and what you love is safe - no matter where you are- just at the touch of your smartphone.
- Smart Touchpad - Auto Lock**
 The door Locks when you touch the palm on the keypad.
- 3 minute Lock Out Feature**
 After five (5) unsuccessful attempts of an invalid code or RFID key tag, lock out mode is activated for 3 minutes.
- Smart Etiquette**
 When entering a pin code on the keypad, the user can open the door lock in silent mode.
- Fake PIN Code**
 Security enhancement to enter any number before or after entering a password to prevent the PIN code from being exposed.
- Internal Forced Lock**
 It is a security-enhancing function that 'disables' authentication methods such as passwords and RFID key tags from outside when setting up functions indoors.
- External Forced Lock**
 It is a security-enhancing function that an alarm goes off if someone opens door from inside when setting up functions outside.
- Other features and Benefits**
 - Remote Controller (Optional): This option may not be available depending on your country or local dealer.
 - Network Module/Controller (Optional): It allows door lock to connect with Home network controller.
 - Intrusion/Broken Alarm.
 - Low Battery Alarm and Emergency Power Supply.

9. Normal Mode (Default Mode)

Normal mode is for convenient mode for anyone with user code to change various settings.

1 → 12 (Registration process) * Continue / ① Complete

1	2	3	4	5	6	7	8	9	10	11	12
---	---	---	---	---	---	---	---	---	----	----	----

User Code Only 1 User

Registr-ation

RFID Key Tag Up to 100 Users

Registr-ation

Visitor Code Only 1 User

Registr-ation 1 # 1 # V # * OR ①

Delete 1 # 3 # U # * OR ①

Onetime Code Only 1 User, Automatically deleted after use

Registr-ation 2 # 1 # 0 # * OR ①

Delete 2 # 3 # U # * OR ①

Delete All RFID Key Tag credentials

Delete 3 # U # * OR ①

Bluetooth setting (Yale Access app)

Registr-ation 7 # Set up a new device in the app

Remote Controller Up to 5 Users

Registr-ation 8 # 1 # SET # * OR ①

Delete 8 # 3 # U # * OR ①

Home Network Controller

Registr-ation 9 # 1 # Cont # * OR ①


Delete 9 # 3 # U # * OR ①

Remote Controller
 Set with registration button located on the top of remote controller. You can press it using a pin like the one shown in the image.

Please note following when pairing lock with Yale Access App.

- Depending on product type or FW version, app registration and door lock connection in normal mode may not be possible, so if registration is not possible, change from normal mode to master mode and try again. [App Registration in Master Mode: Master Pin Code->1 (Registration Button)-> 7-> #]
- Because Yale Access Bluetooth App is only available in master mode, user code automatically changes to master code when registering APP in normal mode.
- Please be informed that all registered credentials will be deleted when changing mode or registering and deleting app.


10. Unlocking Door with Code

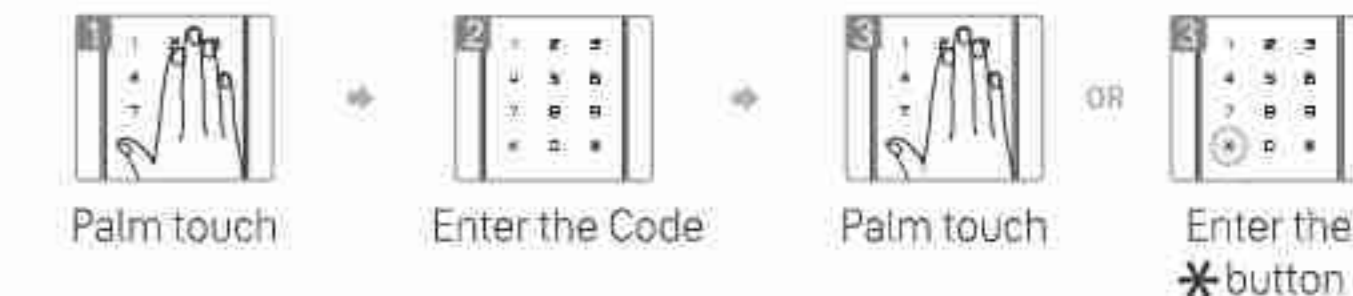

11. Unlocking Door with RFID Key Tag



12. Opening Door(Inside/Outside)

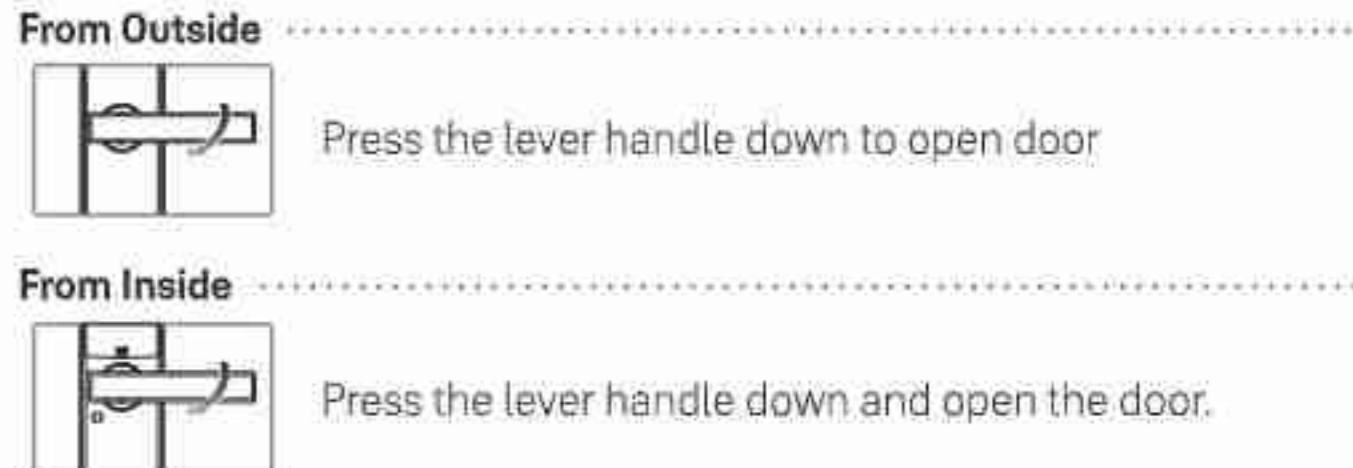

13. Unlocking Door with Smart Etiquette



14. Locking the Door(Inside/Outside)

- Automatic Lock Mode(Inside/Outside)**
 In automatic lock mode, the lock automatically locked within 5 seconds after closing the door and detecting the automatic lock sensor.
- Manual Lock Mode**
 The door locks when touching the keypad with the palm. (outside)
 Use Thumb turn knob on the main body. (Inside)

15. Automatic/Manual Lock

- Enable Automatic Lock**
 Release the button to set automatic lock mode on the main-body (after opening the battery cover)
- Enable Manual Lock**
 Press the button to set manual lock mode on the main-body.

